



The Life of the Kitchen.®


PARTS CATALOG

DTCT466G Gas Cooktop

<i>Pag e</i>	<i>Description</i>
2	Cooktop Assembly
3	Cooktop Parts List
4	Chassis Assembly
5	Chassis Part List

Revised 05-19-2016

DTCT466G: Cooktop Assembly

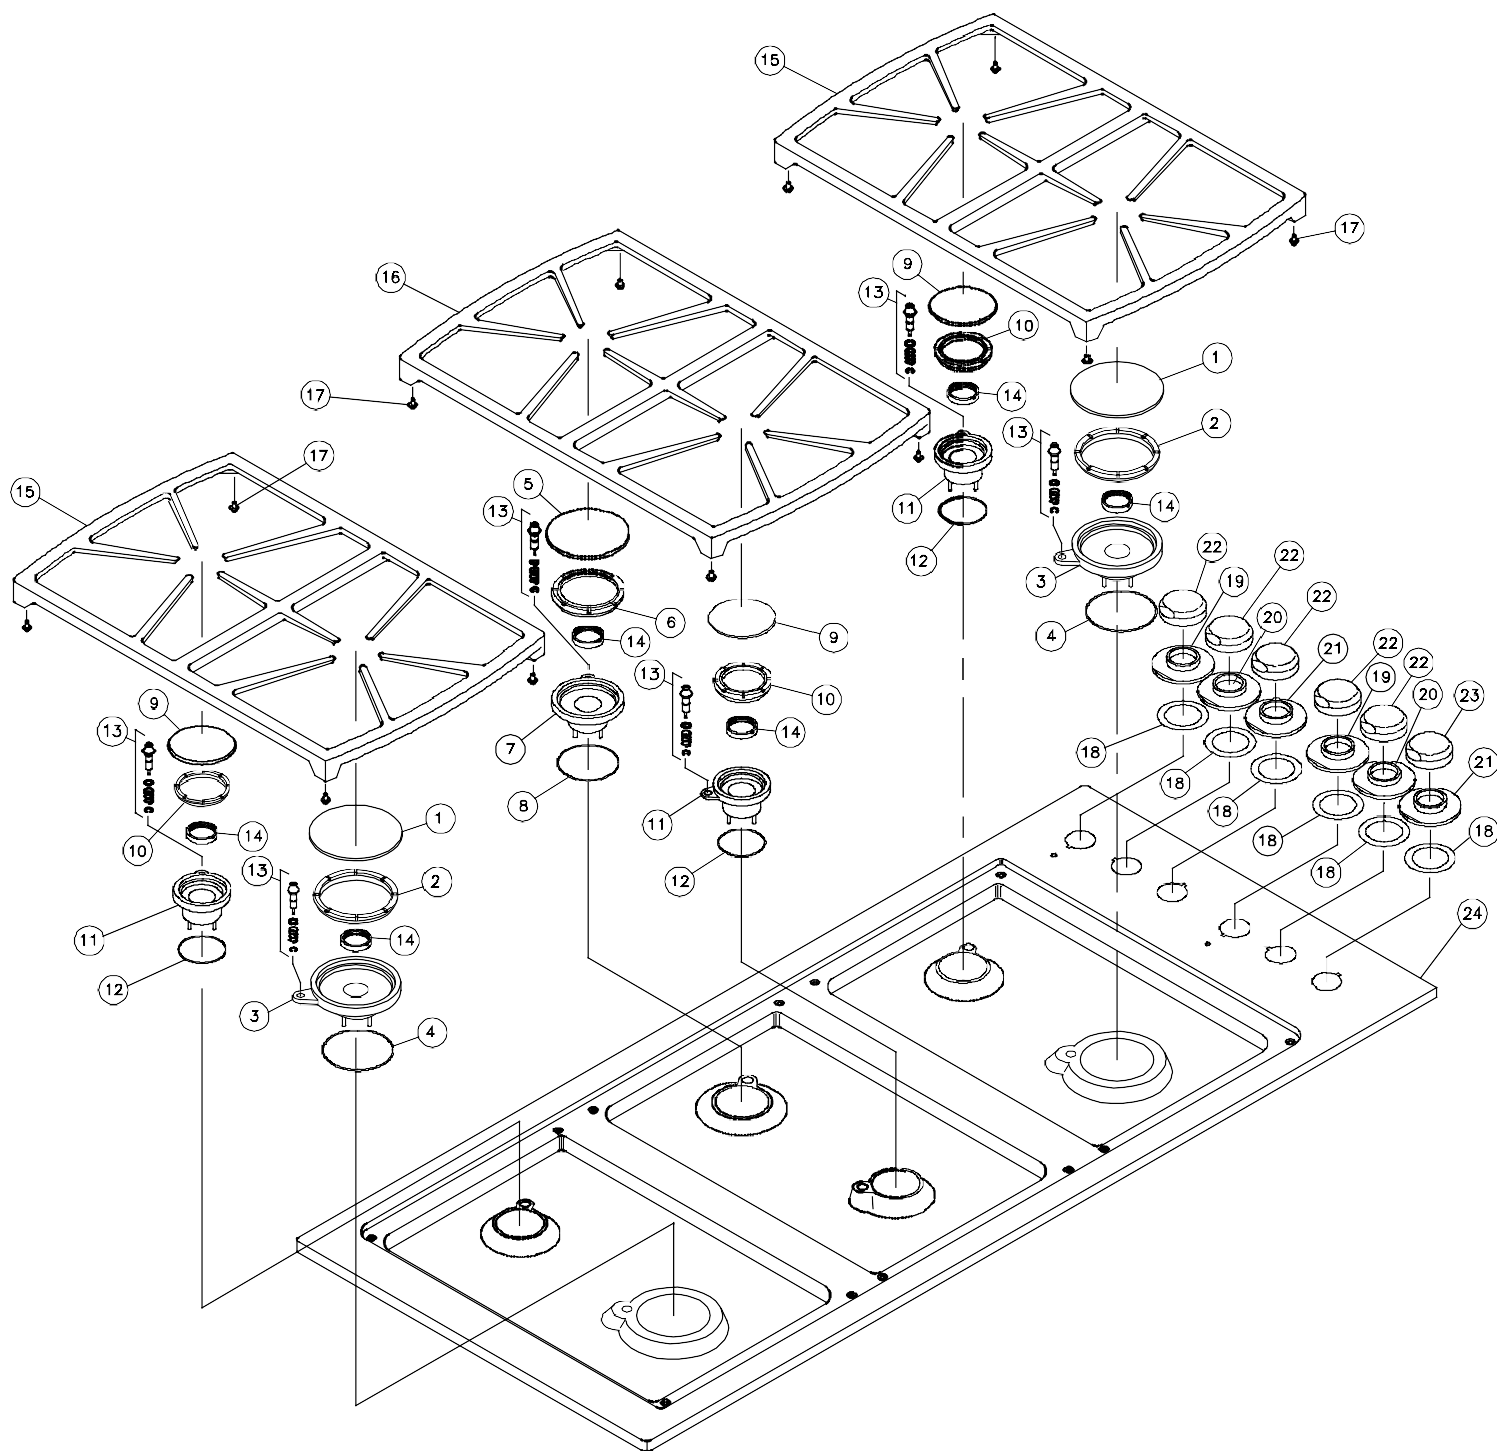


DCTC466G: Cooktop Parts List

Item	Part #	Description
1	72435SB	Burner Cap (D)
2	86918	Burner Ring (D)
3	62953	Assy, Burner Head (D)
4	86395	O-Ring, Head (D)
5	86523SB	Burner Cap (C)
6	86407	Burner Ring (C)
7	62952	Assy, Burner Head (C)
8	86397	O-Ring, Head (C)
9	86524SB	Burner Cap (B)
10	86408	Burner Ring (B)
11	62951	Assy, Burner Head (B)
12	86937	O-Ring, Head (B)
13	76482-001	Assy, Ignitor Kit

Item	Part #	Description
14	86405	Ring Nut
15	108852	Grate, Sides
16	109052	Grate, Center
17	66916	Grate Support Pad (set of 4)
18	82973	Gasket
19	108853-03	Spill Protector
20	108853-04	Spill Protector
21	108853-05	Spill Protector
22	108854-02	Knob w/out Logo
23	108854-01	Knob with Logo
24	36423S	Top Frame, Stainless
	36420BP	Top Frame, Black
	36420RP	Top Frame, Arctic

DTCT466G: Chassis Assembly

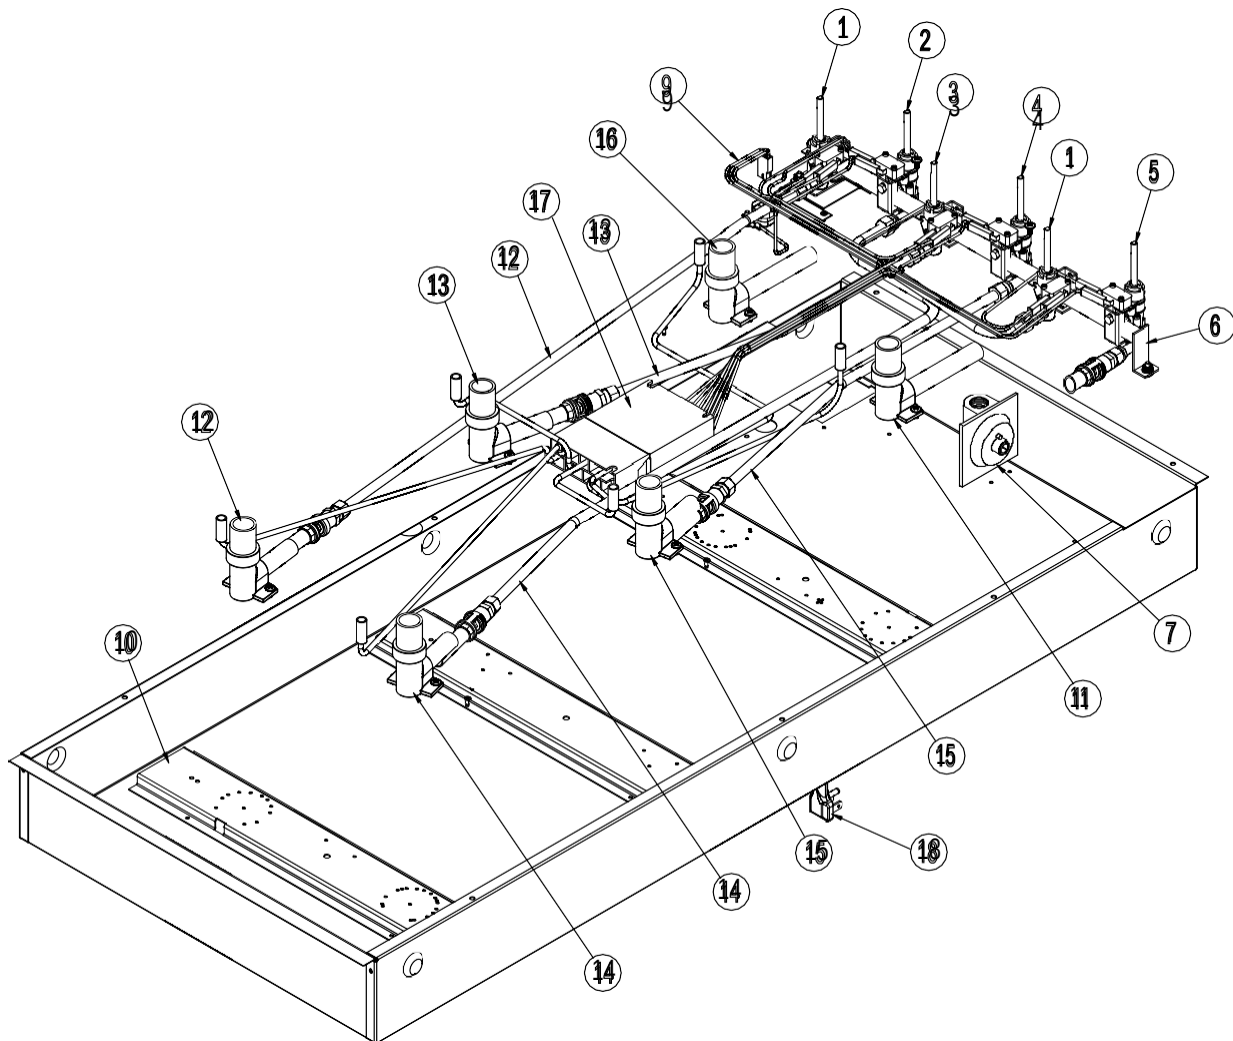

DTCT466: Chassis Parts List

Item	NG Part #	NGH Part#	LP Part #	LPH Part#	Description
1	107594-01	107594-02	107594-04	107594-05	Valve (B)
2	107594-02	107594-03	107594-05	107594-06	Valve (C)
3	107594-01	107594-02	107594-04	107594-05	Valve (B)
4	107594-03	107594-07	107594-06	107594-08	Valve (D)
5	107594-03	107594-07	107594-06	107594-08	Valve (D)
6	701870-01	701870-03	701870-02	701870-04	Manifold with Valves
7	62320	62320	62434	62434	Regulator
9	72424	72424	72424	72424	Wire Harness
10	46238	46238	46238	46238	Burner Channel Support
11	701864-05	701864-07	701864-06	701864-08	Burner Tube, Assy (RF)
12	701862-01	701862-03	701862-02	701862-04	Burner Tube, Assy (LR)
13	701863-05	701863-07	701863-06	701863-08	Burner Tube, Assy (CR)
14	701862-05	701862-07	701862-06	701862-08	Burner Tube, Assy (LF)
15	701863-01	701863-03	701863-02	701863-04	Burner Tube, Assy (CF)
16	701864-01	701864-03	701864-02	701864-04	Burner Tube, Assy (RR)
17	82318	82318	82318	82318	Spark Module
18	72765	72765	72765	72765	Power Supply Cord
-	86373	86373	86373	86373	Air Shutter, "C" and "D" (not shown)
-	86372	86372	86372	86372	Air Shutter, "B" (not shown)
-	103789	103789	103789	103789	Switch, Ignition (not shown)